


125B, Air Percussive Scaler - Exploded View

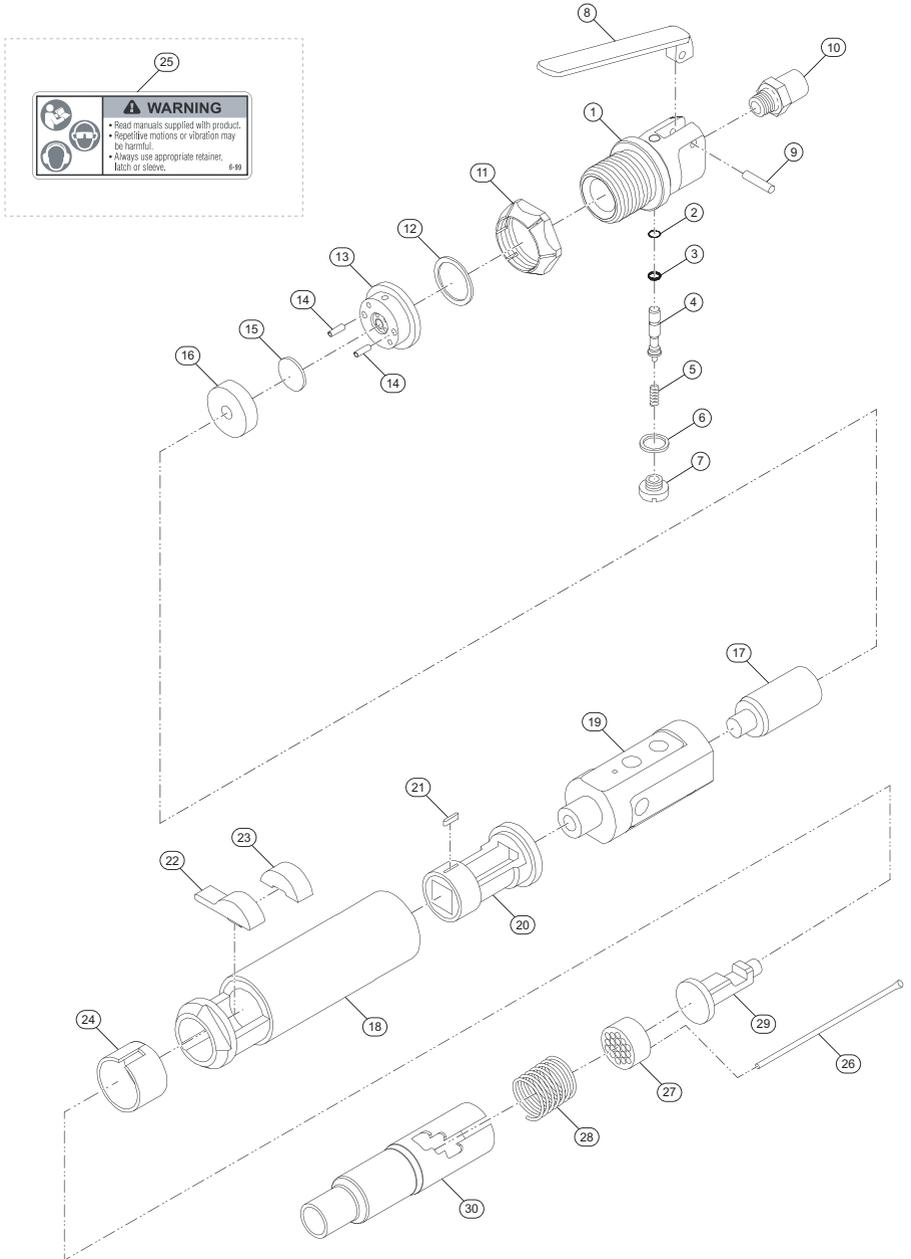

(Dwg. TL-125B-PLM-1)



125B, Air Percussive Scaler - Parts List

Item	Part Description	Part Number
1	Backhead	TP-125B-102
2	Throttle Valve Stem O-Ring	TP-125B-065
3	Valve O-Ring	TP-125B-282
4	Throttle Valve	TP-125B-302
5	Spring	TP-125B-051
6	Gasket	TP-125B-801
7	Valve Cap	TP-125B-943
8	Lever	TP-125B-273
9	Lever Pin	TP-125B-015
10	Inlet Bushing	TP-125B-565
11	Locking Ring	TP-125B-582
12	Alignment Shim (2 required)	TP-125B-246
13	Rear Valve Block	TP-125B-063-R
14	Pin (2 required)	TP-125B-098
15	Valve	TP-125B-063
16	Front Valve Block	TP-125B-063-F
17	Piston	TP-125B-020
*	Casing Assembly	TA-125B-040
18	Casing	TP-125B-040
19	Casing Sleeve	TP-125B-930
20	Nozzle	TP-125B-019
21	Key, Rectangular	TP-125B-754
22	Bit Retainer	TP-125B-018
23	Bit Retainer Buffer	TP-125B-203
24	Retainer Clip	TP-125B-118
25	Warning Label	04276846
*	Needle Attachment	TA-125B-120
26	Needle Package (19 required)	TP-125B-120
27	Needle Holder	TP-125B-293
28	Spring	TP-125B-250
29	Anvil	TP-125B-314
30	Needle Housing	TP-125B-006

* Indicates not illustrated.

Parts and Maintenance

When tool life has expired, it is recommended that the tool be disassembled, degreased and parts separated by material for proper recycling.

Tool repair and maintenance should only be carried out by an Authorized Service Center.

Refer all communications to the nearest **Ingersoll Rand** office or distributor.

Related Documentation

Manuals can be downloaded from ingersollrand.com

For additional information, refer to:

Product Safety Information Manual 04581450

Product Information Manual TL-125B-PIM

CE-Declaration of Conformity TL-125B-DOC

UK-Declaration of Conformity TL-125B-DOC-UK

