

Air Percussive Tamper


341 and 441 Series

Parts Information





341 and 441 Series, Air Percussive Tamper - Exploded View

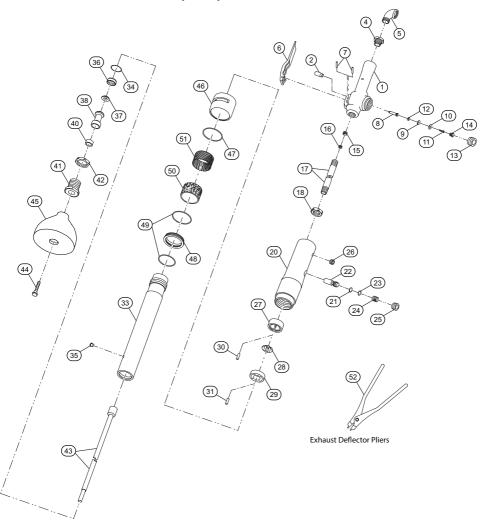

(Dwg. TPA118-7)

2 16600413_ed5

341 and 441 Series, Air Percussive Tamper - Parts List

Item	Part Description	Part N	umber		
	Part Description	Series 341 Series 4			
*	Throttle Handle Assembly				
	for 341 and 441	241SR-A160			
	for 341-EU and 441-EU	241SR-EU-A160			
*	Warning Label				
	for 341 and 441	WARNING-6-99			
	for 341-EU and 441-EU	EU-99			
1	Throttle Handle Body	150SI	150SR-160		
‡2	Throttle Valve Bushing	150SI	R-503		
4	Reducing Bushing (1/2" to 3/8")	135	R-9		
5	3/8" Street Elbow	125	12SR-8		
6	Throttle Lever	33SR	33SR-163		
7	Throttle Lever Pin or Throttle Lever Stop Pin (2 required)	5040T-962			
8	Throttle Valve	150SR-302			
• 9	Throttle Valve Face	MT4-159			
10	Throttle Valve Face Cap	R4-157			
11	Throttle Valve Face Retaining Screw	4U-359			
12	Retaining Screw Lock Washer	H54U-352			
13	Throttle Valve Cap	DLC-165			
14	Throttle Valve Spring	150SR-262			
15	Screen Retaining Spring	241SR-5			
16	Air Strainer Screen	434-61			
17	Handle Standard Length (19-1/2") (3/4" NPT male both ends)	34SI	34SR-1A		
18	Handle Lock Nut	24151	241SR-118		
20	Head Block	341SR-14	441SR-14		
• 21	Lubricator Valve Seat	R18	L-14		
22	Lubricator Valve	241SR-101	441SR-101		
23	Lubricator Valve Face	ROAF	R-210		
24	Lubricator Valve Spring	24SR-106			
25	Lubricator Valve Cap	HH-266			
26	Oil Chamber Plug	ROH	R0H-377		
27	Valve Box Cap	33SR-43	441SR-43		
28	Valve	33SR-40	441SR-40		
29	Valve Box	341SR-41	441SR-41		
30	Valve Box Cap Dowel (2 required)	33SR-45			
31	Valve Box Dowel (2 required)	D01	D01-527		
33	Barrel for Piston with Round Rod	341SR-R10	441SR-R10		
• 34	Seal Support Gasket	P250-283	R38-311		
35	Grease Fitting	130SR-188			

^{*} Indicates not illustrated.

16600413_ed5 3

[•] Indicates common-wear parts. Maintain stock to reduce downtime.

[‡] Requires a special two-step reamer after installation. Refer to Disassembly/Assembly Instructions.

341 and 441 Series, Air Percussive Tamper - Parts List (Continued)

Item	B 18 11	Part N	Part Number		
	Part Description	Series 341	Series 441		
36	Seal Support	341SR-28	441SR-28		
• 37	Rod Rear Seal	341SR-30	441SR-30		
38	Piston Rod Guide	341SR-A32A	441SR-A32A		
• 40	Rod Front Seal	341SR-31	441SR-31		
• 41	Guide Retainer	341SR-33A	441SR-33A		
42	Locking Nut	341SR-17	441SR-17		
43	Piston with Round Rod Standard Size	341SR-R20 (1.6235 diameter)	441SR-R20 (1.998 diameter)		
+	0.004" Oversize	341SR-R20-4			
	0.008" Oversize	341SR-R20-8			
	0.012" Oversize	341SR-R20-12			
	0.016" Oversize	341SR-R20-16			
++ 44	Butt Lock Screw	34SR-85	441SR-85		
45	Malleable Butt 5-3/4" Diameter (lock-type)	34SR-M183-5-3/4	44SR-M183-5-3/4		
*	Muffler Kit	341SR-K123			
46	Exhaust Deflector Assembly	341SR-A123			
47	Deflector Seal	341SR-312			
48	Deflector Retainer Assembly	341SR-A124			
49	Deflector Retainer Seal (2 required)	538-316			
50	Exhaust Silencer	341SR-311			
51	Deflector Screen	241SR-122			
52	Exhaust Deflector Pliers	34\$	34SR-54		
*	Steel Butt (3" diameter)	34SR-383			
*	Male Hose Nipple (1/2" hose to 3/8" male pipe)	AV	AV1-46		

^{*} Indicates not illustrated.

4 16600413_ed5

[•] Indicates common-wear parts. Maintain stock to reduce downtime.

 $^{+ \, {\}sf See \, Drawing \, TPD1699 \, on \, page \, 5 \, for \, dimensions \, of \, Oversize \, Piston \, for \, Model \, 341 \, Tamper.}$


⁺⁺ Part No. 34SR-85 has a 3/8"-16 thread.

⁺⁺ Part No. 441SR-85 has a 1/2"-13 thread.

^{++ 441}SR Tampers manufactured before June, 1984, use Butt Lock Screw Part No. 34SR-85.

^{++ 441}SR Tampers manufactured after June, 1984, use Butt Lock Screw Part No. 441SR-85.

Oversize Pistons

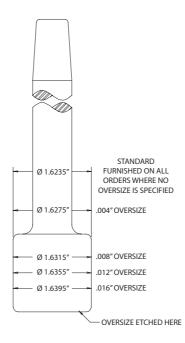

(Dwg. TPD1699)

Parts and Maintenance

When tool life has expired, it is recommended that the tool be disassembled, degreased and parts separated by material for proper recycling. Tool repair and maintenance should only be carried out by an Authorized Service Center.

Refer all communications to the nearest Ingersoll Rand office or distributor.

Related Documentation

Manuals can be downloaded from ingersollrand.com

For additional information, refer to: Product Safety Information Manual 04581450 Product Information Manual 03528676 Maintenance Information Manual 16600421

16600413_ed5 5

Notes:			

Notes:			

